
 


These instructions apply to all models shown below.



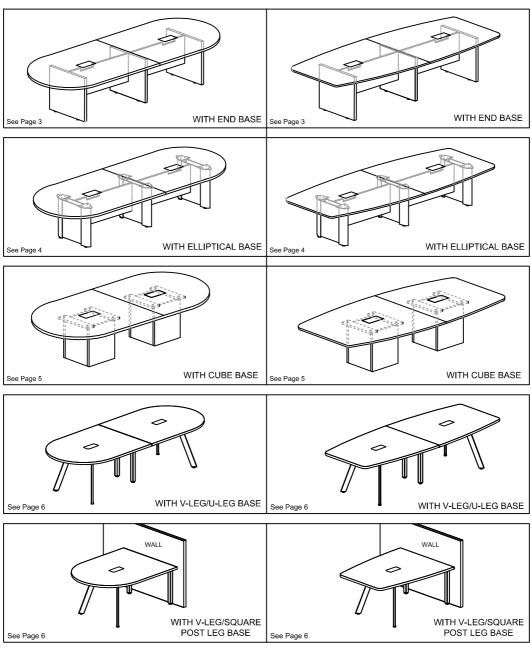




IMPORTANT NOTE:


- Place all wooden parts on a clean, smooth surface to prevent the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

PAGE 1 OF 6




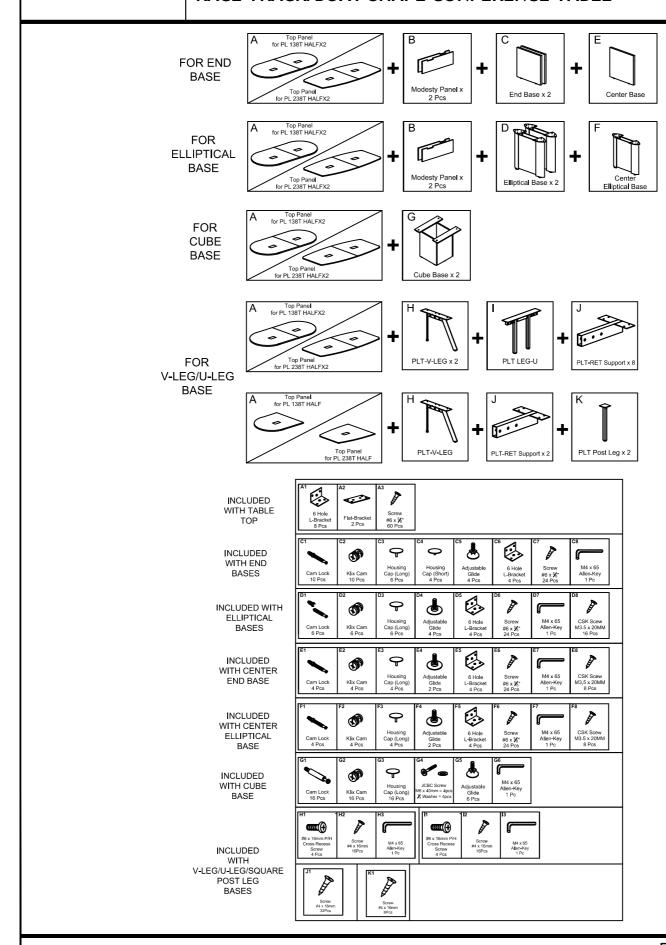




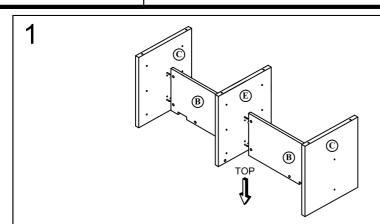



Attach the two End Base (C) and Center Base (E) to Modesty Panel (B) by using Cam Lock (C1) and Klix Cam (C2).

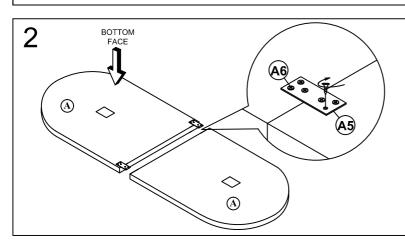

Attach the Flat-Bracket (A2) to two Top Panel (A) as shown. Tighten Screws (A3) securely.

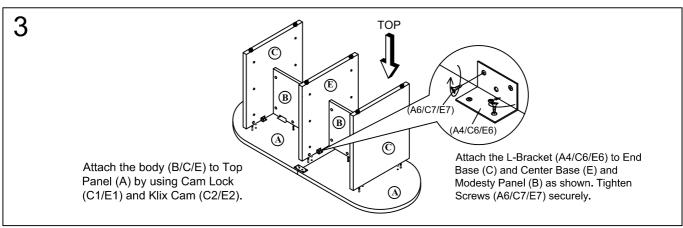


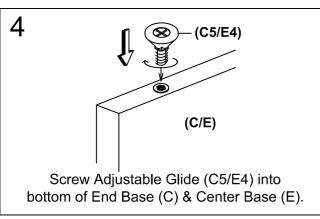


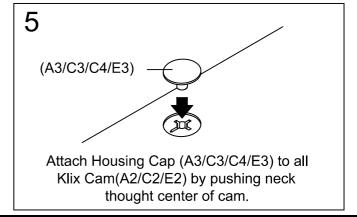



PAGE 3 OF 6



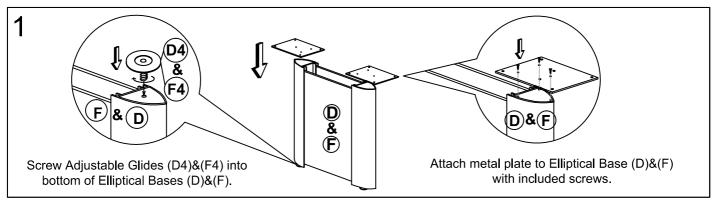

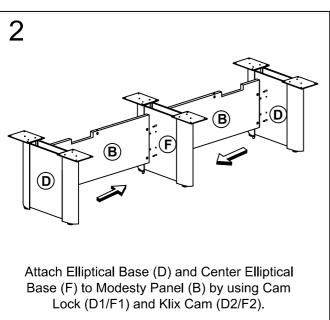

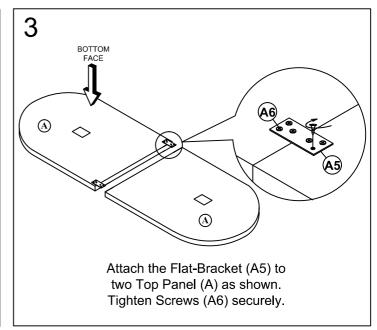


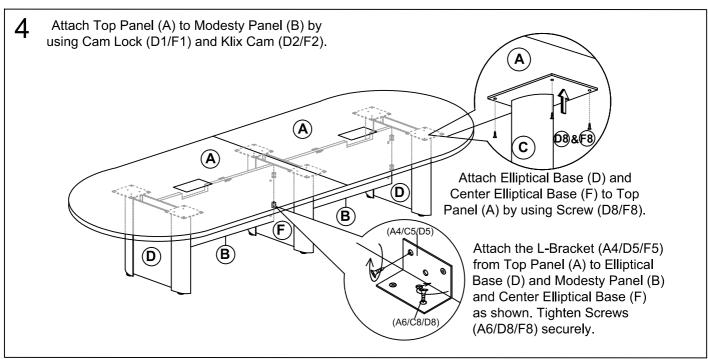



PAGE 4 OF 6




ASSEMBLING TABLE WITH V-LEG BASE

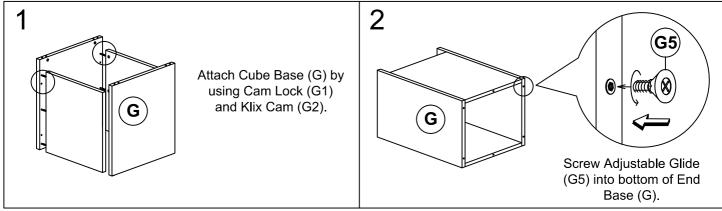

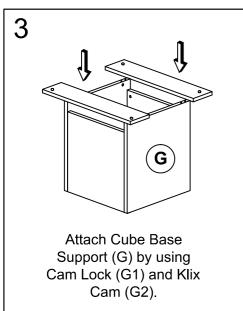

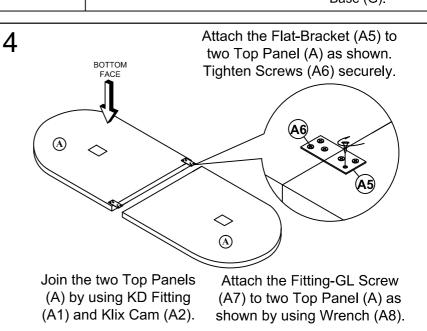


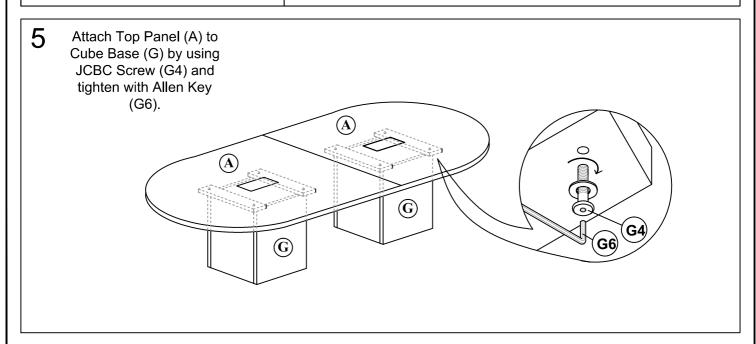


PAGE 5 OF 6




ASSEMBLING TABLE WITH V-LEG BASE

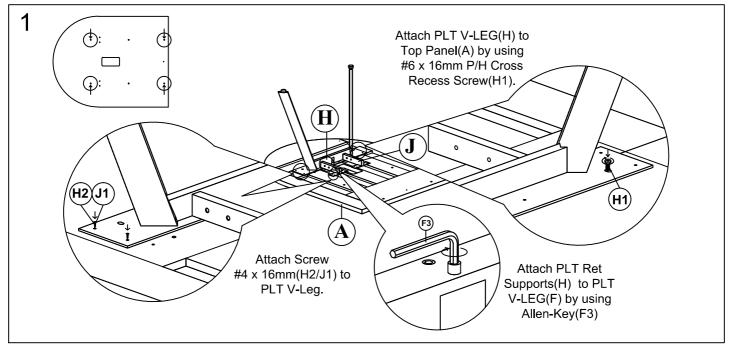

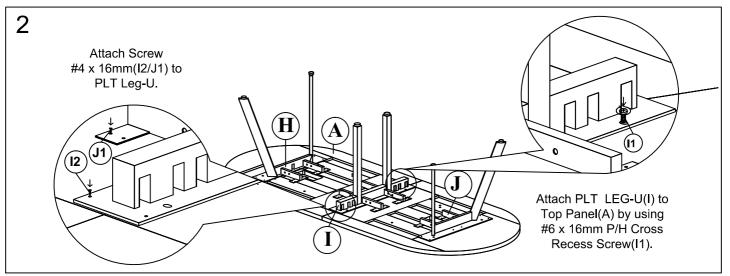

ASSEMBLING TABLE WITH V-LEG BASE + SQUARE POST LEG

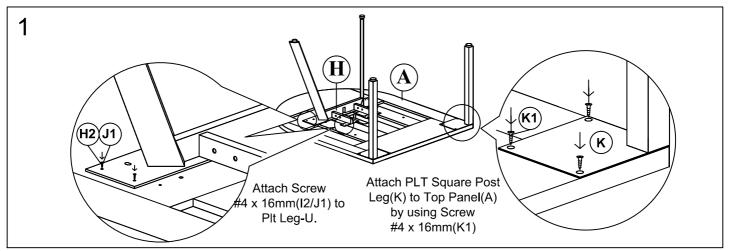

PAGE 6 OF 6