




Thank you for purchasing the Performance Hutch With Doors.
Please follow these instructions for easy assembly.

IMPORTANT: DO NOT MIX TYPE A AND TYPE B HINGE

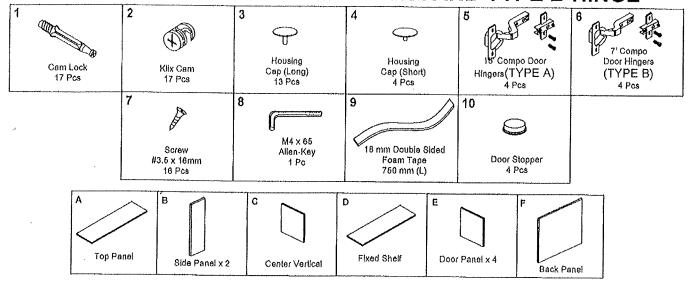


KLIX CAM INSTRUCTIONS

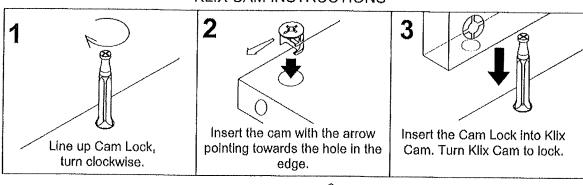

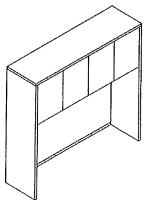


IMPORTANT!!


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or boils until the unit is completely assembled.
- Keep all hardware parts out of reach of children.

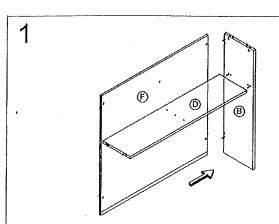


Attach the Fixed Shelf (D) and Back Panel (F) to Side Panel (B) by using Cam Lock (1) and Klix Cam (2).

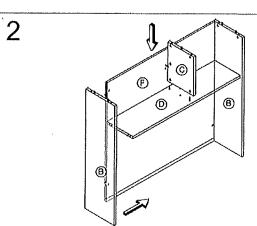


Attach the Center Vertical (C) and another Side Panel (B) by using Cam Lock (1) and Klix Cam (2).

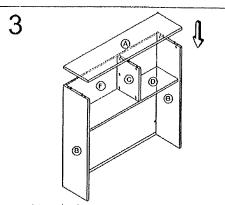


Attach the Top Panel (A) to Side Panel (B) and Center Vertical Panel (C) by using Cam Lock (1) and Klix Cam (2).

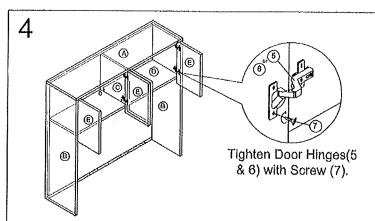


Attach the Doors Panel (E) to the Side Panel (B) with Type A Hingers (5). Attach Door Panel (E) to Center Vertical (C) with Type B Hingers (6).

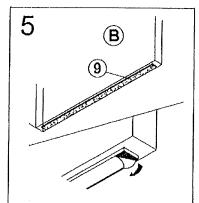

Peel Double Sided Foam Tape (9) and stick it on bottom of Side Panel (B).

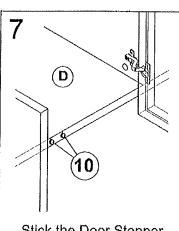

Stick the Door Stopper (10) on the Fixed Shelf (D)

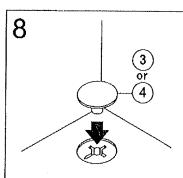

Attach Housing Cap (3 or 4) to all Klix Cam(2) by pushing neck thought center of cam.