 
 

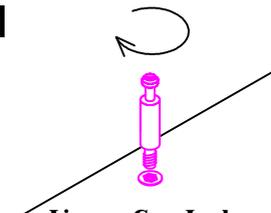
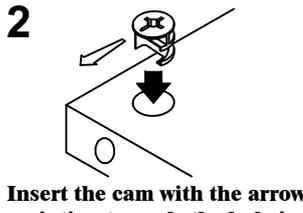
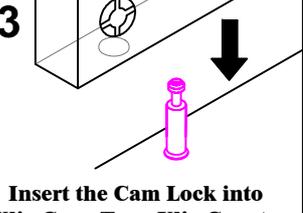


**Thank you for purchasing the Performance Open Hutch.
Please follow these instructions for easy assembly.**

1  Cam Lock 8 Pcs	2  Klix Cam 8 Pcs	3  Housing Cap (Long) 4 Pcs	4  Housing Cap (Short) 4 Pcs	5  System 6 Fitting 4 Sets	6  Shelf Support Pin 4 Pcs
		7  18 mm Double Sided Tape 1600 mm (L)	8  M4 x 65 Allen-Key 1 Pc		
A  Top Panel	B  Left Gable	C  Right Gable	D  Fixed Shelf	E  Adj. Shelf	F  Back Panel

KLIX CAM INSTRUCTIONS


1  Line up Cam Lock, turn clockwise.	2  Insert the cam with the arrow pointing towards the hole in the edge.	3  Insert the Cam Lock into Klix Cam. Turn Klix Cam to lock.
---	--	--

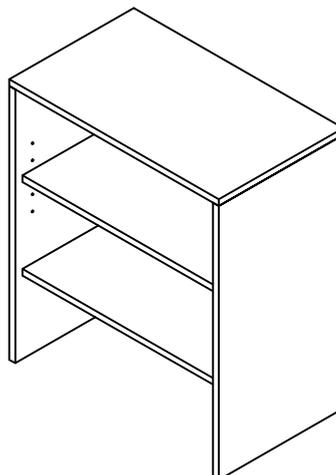

IMPORTANT !!


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.

1

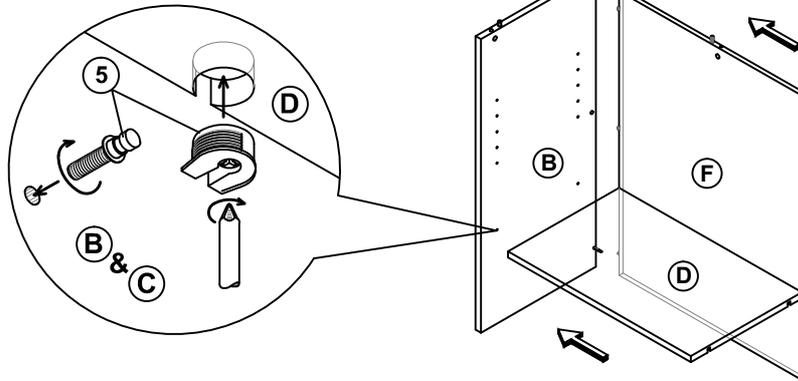


Attach Fixed Shelf(D) to Left Gable(B) by using System 6 Fitting(5) and Back Panel(F) by using Cam Lock(1) and Klix Cam(2).

2

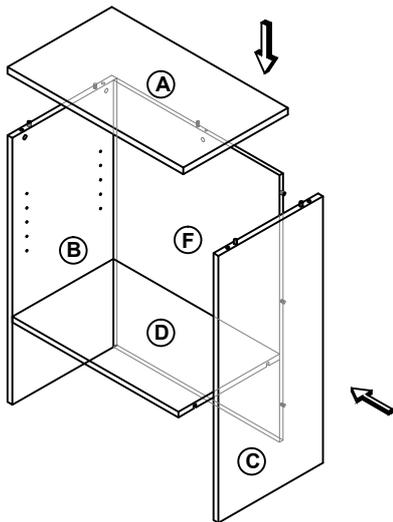

Attach Right Gable(C) to Fixed Shelf(D) by using System 6 Fitting(5) . Attach Top Panel(A) to Left Gable(B) and Right Gable(C) by using Cam Lock(1) and Klix Cam(2).

3

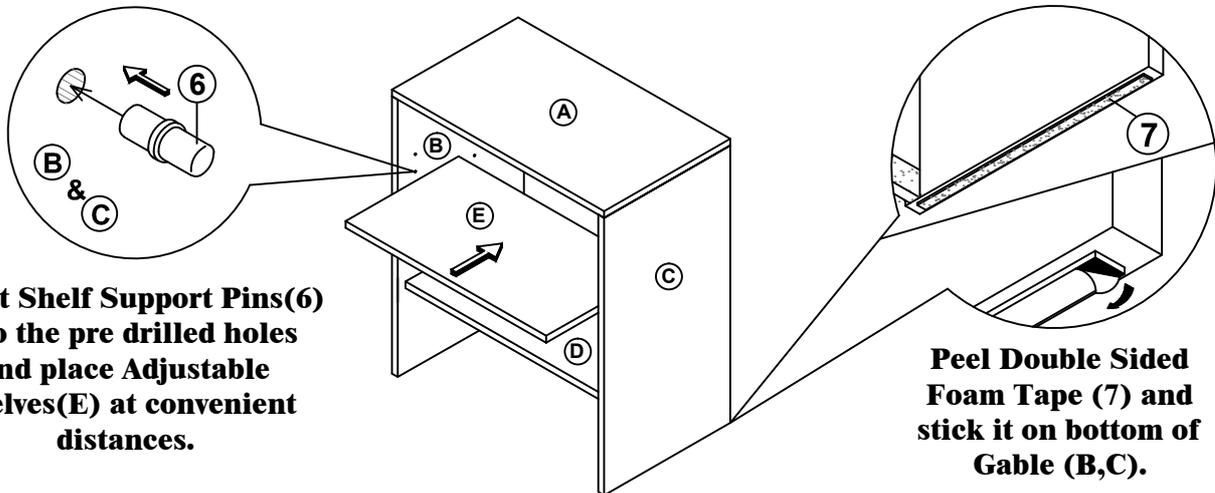

Insert Shelf Support Pins(6) into the pre drilled holes and place Adjustable Shelves(E) at convenient distances.

Peel Double Sided Foam Tape (7) and stick it on bottom of Gable (B,C).