

Troubleshooting for ECO Height Adjustable Base



To reset: Push tab down to lower to the lowest setting, keep holding until the table goes down a little further and beeps. Base will be successfully reset.

If that does not work, unplug and plug back in and try reset again.

If it overheats:

The table will stop moving and will beep twice when you try to move it up or down. Let the table cool down for at least 20 minutes and reset.

Two column height difference protection:

Press tab and it will beep once. Reset system to solve.

After a power outage:

Press tab and it will beep once. Reset system to solve.