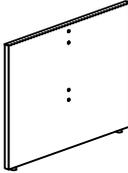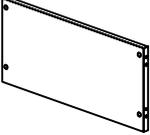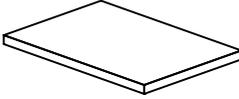# PERFORMANCE
"When Quality and Performance Count"

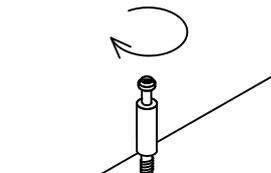# ASSEMBLY INSTRUCTION FOR 41" END PANEL & MODESTY PANEL FOR PLT TOP

HARDWARE

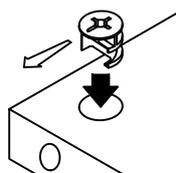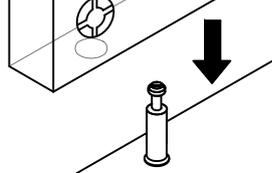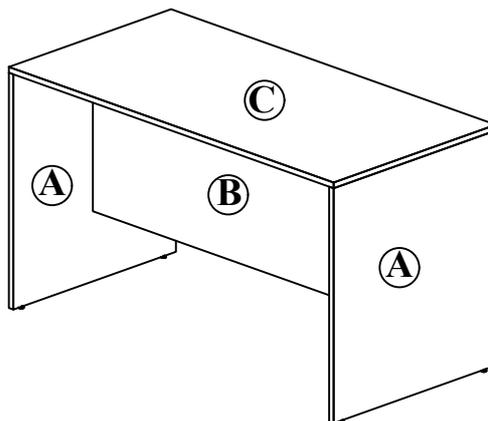| 1	2	3	4	5	6	7
CAM LOCK 4 PCS	KLIX CAM 4 PCS	HOUSING CAP (SHORT) 4 PCS	ADJUSTABLE GLIDE 4 PCS	6 HOLE L-BRACKET 6 PCS	SCREW #6 x ⅝" 36 PCS	M4 x 65 ALLEN-KEY 1 PC

COMPONENTS

A	B	C
END PANEL 2PCS (PLTEP 41XX)	MODESTY PANEL (PLTMOD 41XX)	PLT TOP

KLIX CAM INSTRUCTIONS

1	2	3
LINE UP CAM LOCK, TURN CLOCKWISE.	INSERT THE CAM WITH THE ARROW POINTING TOWARDS THE HOLE IN THE EDGE.	INSERT THE CAM LOCK INTO KLIX CAM. TURN KLIX CAM TO LOCK.

IMPORTANT NOTE :

• Place all wooden parts on a clean, smooth surface to prevent the parts from being scratched.
• Check that you have all parts and hardware.
• Remove all wrapping materials, including staples & packing straps before you start to assemble.
• Do not tighten any screws or bolts until the unit is completely assembled.
• Keep all hardware parts out of reach of children.

PERFORMANCE
"When Quality and Performance Count"

1

SCREW ADJUSTABLE GLIDES(4) INTO BOTTOM OF SIDE PANELS.

ATTACH CAM LOCK(1) TO END PANEL (C).

LINE UP CAM LOCK(1), TURN CLOCKWISE.

2

ATTACH KLIX CAM (2) TO MODESTY PANEL(B).

INSERT THE KLIX CAM(2) WITH THE ARROW POINTING TOWARDS THE HOLE IN THE EDGE.

3

ATTACH END PANEL(A) TO MODESTY PANEL(B) USING CAM LOCK(1) AND KLIX CAM(2). THEN ATTACH PLT TOP(C) TO ASSEMBLED PANEL BY USING L-BRACKET(5) & SCREW(6)

4

ATTACH HOUSING CAP (3) TO ALL KLIX CAM(2) BY PUSHING NECK THROUGH CENTER OF CAM.