












Assembly Instructions

MODEL NO.: EL142


1/2 CREDENZA ENDPANEL

1	 Cam lock 4pcs+1pc(spare)	2	 Klix Cam 4pcs+1pc(spare)	3	 Cam Cover 7pcs+1pc(spare)	4	 Dowel 3pcs+1pc(spare)	5	 Adjustable Glide 2pcs	6	 6Hole L-Bracket 1+1pcs	7	 Screw #4*16mm 6pcs+1pc(spare)	8	 L-Bracket 1pc	9	 Screw #5*19mm 8pcs+1pc(spare)	10	 Wrench 1pc
----------	--	----------	--	----------	---	----------	---	----------	---	----------	---	----------	---	----------	---	----------	---	-----------	--



STEP1

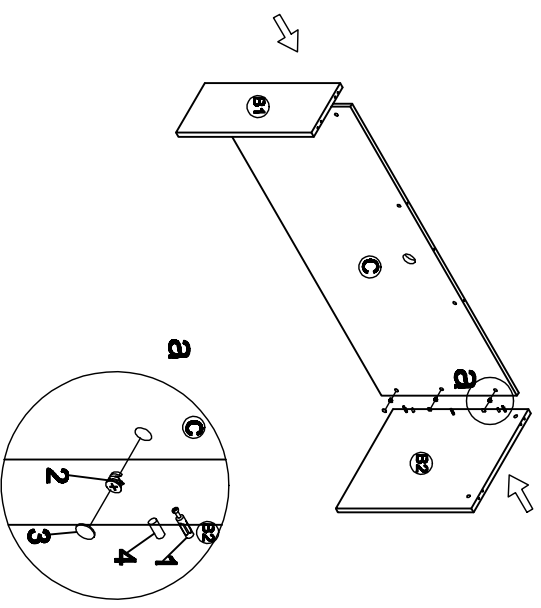






STEP2

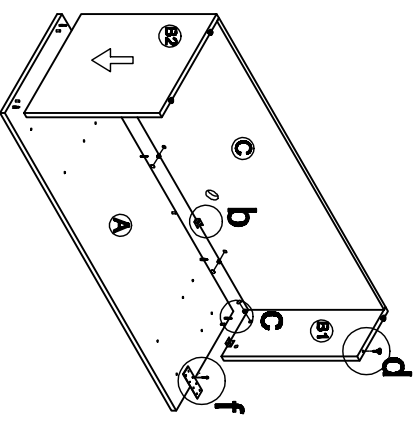

STEP3

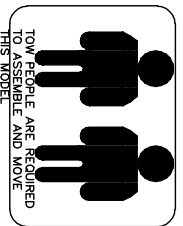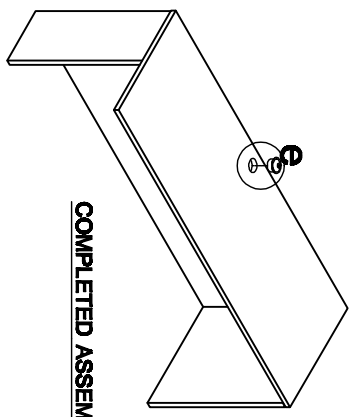

IMPORTANT:
FUNCTION OF KLIX CAM
1/4 RIGHT TURN FOR LOCKING
Make Sure The Arrow Is Pointing Upwards Before Inserting into The Panels Hole

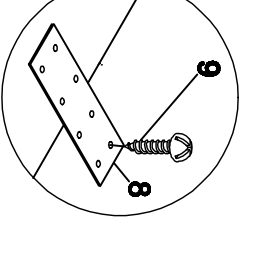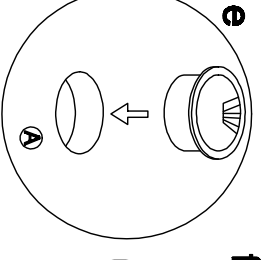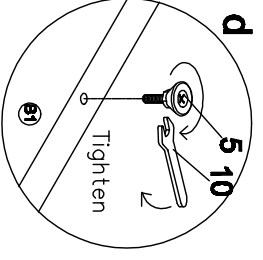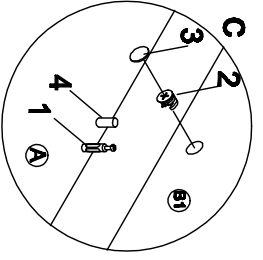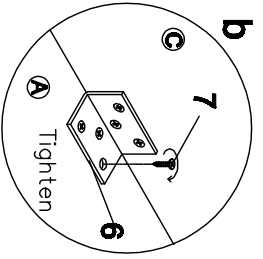

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children